



## VESTIL MANUFACTURING CORP.

2999 North Wayne Street, P.O. Box 507, Angola, IN 46703

Telephone: (260) 665-7586 -or- Toll Free (800) 348-0868

Fax: (260) 665-1339

www.vestilmfg.com e-mail: [sales@vestil.com](mailto:sales@vestil.com)

# LM-SERIES FORK-MOUNTED LIFT MASTER BOOMS

## USE AND MAINTENANCE MANUAL



LM-HRT &  
LM-HRNT



LM-OBT &  
LM-OBNT



LM-1T &  
LM-1NT



LM-EBT &  
LM-EBNT

### Receiving instructions:

After delivery, IMMEDIATELY remove the packaging from the product in a manner that preserves the packaging and maintains the orientation of the product in the packaging; then inspect the product closely to determine whether it sustained damage during transport. **If damage is discovered during the inspection, immediately record a complete description of the damage on the bill of lading.** If the product is undamaged, discard the packaging.

### NOTES:

1) Compliance with laws, regulations, codes, and non-voluntary standards enforced in the location where the product is used is exclusively the responsibility of the owner/end-user. Before using the boom for the first time, the end-user/owner should perform an "Initial Inspection". (See "Initial Inspection," p. 21).

2) VESTIL is **not liable** for any injury or property damage that occurs as a consequence of failing to apply either:  
a) Instructions in this manual; or b) information provided on labels affixed to the product. Neither is Vestil responsible for any consequential damages sustained as a result of failing to exercise sound judgment while assembling, installing, using or maintaining this product.

### Table of Contents

Product Introduction.....	2
Safety Principles.....	3
Safety Recommendations.....	3 - 4
Standard Design Elements.....	4
Operation Instructions.....	22 - 24
Inspections & Maintenance.....	25 - 26
Label placement diagram.....	27
Limited Warranty.....	28

### Table of Figures

Fig. 1 LM-1T & -1NT Exploded Parts Diagrams & Parts Lists.....	5 - 8
Fig. 2 LM-OBT & -OBNT Exploded Parts Diagrams & Parts Lists.....	9 - 12
Fig. 3 LM-HRT & -HRNT Exploded Parts Diagram & Parts Lists.....	13 - 16
Fig. 4 LM-EBT & -EBNT Exploded Parts Diagram & Parts Lists.....	17 - 20
Fig. 5 LMS-(EBT & -EBNT)-46-(4k, 6k, & 8k) & Parts Lists.....	21
Fig. 6 Step 1 - Securely connect boom to fork truck.....	24
Fig. 7 Step 3 - Manual adjust degree of boom extension.....	22
Fig. 8 [OBT Models] Step 4 - Boom Angle Adjustment .....	23