


Spenco® PolySorb®

HEAVYDUTY

Replacement Insoles

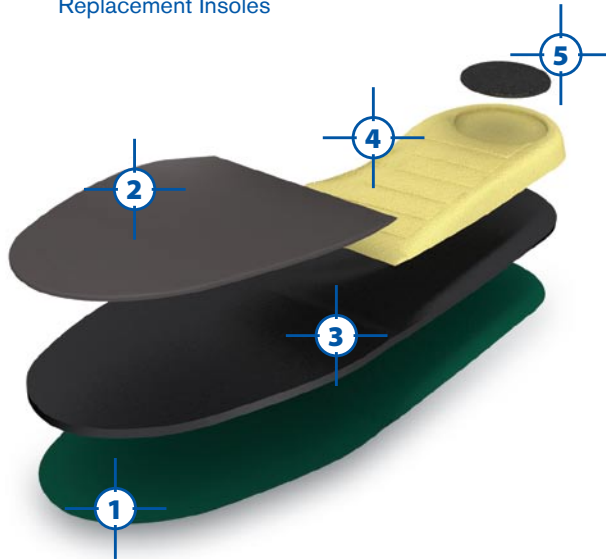

Cat. No. 37-816

PERFORMANCE

Maximum Comfort—All Day Long

Target Consumer:

Workers seeking all day comfort, cushioning and support.

Workers who want targeted shock absorption to soften heel impact.

Recommended For:

Increased shock absorption and heel strike protection.

Reduced friction to help prevent blisters.

Increased energy return for improved performance.



Best For Use In:

Work boots or shoes with removable insoles.



Components*:

PU, SpenCore® Material, Fabric,
Thickness at Heel: 13.21mm (1/2in),
Thickness at Forefoot: 5.50mm (1/4in)



Instructions:

Remove the original insole from the shoe (some brands of shoes glue the insole to the shoe, but careful removal will not damage the shoe). Use the original insole as a guide to trace and trim the Spenco® PolySorb® Occupational Heavy Duty Insole.



Care:

Hand wash in warm water. Air dry.

Sizing Chart:

Size	1	2	3	4	5	6
U.S. Women's	5/6	7/8	9/10	11/12		
U.S. Men's		6/7	8/9	10/11	12/13	14/15
U.K.	4/5	5/6	7/8	9/10	11/12	13/14
European	36/38	38/40	40/42	42/44	44/46	46/48

Features & Benefits:

- 4-Way Stretch Fabric with Silpure Antimicrobial** helps prevent blisters while controlling odor.
- SBR Forefoot Pad** provides superior cushioning and energy return for people on their feet all day.
- SpenCore® Material** a 5/32" layer of this material absorbs shock and impact to provide intense comfort and cushioning.
- Lightweight POLYSORB® Polyurethane Foam** provides arch and heel support.
- SpenCore® Heel-strike Pad** provides extra cushioning and shock absorption in the heel.

One-Year Unconditional Guarantee

Call toll-free: 1-800-877-3626
In Canada: 1-800-387-9538

 www.spenco.com



*Measurements are approximate and vary by size.
Silpure is a Registered Trademark of Thomson Research Associates, Inc.