




3M™ Half Facepiece Disposable Respirator 5000 Series

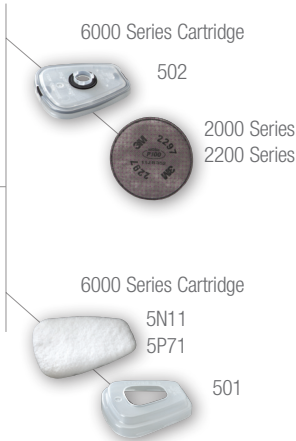

3M™ Particulate Filters

3M Particulate Filters 2000, 2200 and 7093 Series can be attached to all 3M™ Respirators with bayonet connections.

The 2000, 2200 and 7093 Series filters can also be attached to 3M™ 6000 Series Cartridges using the 3M™ 502 Filter Adapter.

The 3M™ 5N11 and 5P71 Filters can be attached to the 3M™ Half Facepiece Disposable 5000 Series Respirator or 6000 Series Cartridges using the 3M™ 501 Filter Retainer. They can also be attached to 3M™ Respirators with bayonet connections using the 603 adapter.

Note: All 3M™ Respirator, cartridge, filter combinations must be in accordance with NIOSH approvals.



3M's bayonet-style cartridge connection for easy to fit filters and cartridges.

3M™ Particulate Filters, continued

Product Code	Description
2297	NIOSH approved for environments containing certain oil and non-oil based particles. 3M recommended for relief against nuisance level* organic vapors.
5N11	NIOSH approved for environments containing certain non-oil based particles. Use with 3M™ Respirators 5000 Series or 3M™ Cartridges 6000 Series, and 3M™ Filter Retainer 501.
5P71	NIOSH approved for environments containing certain oil and non-oil based particles. Use with 3M™ Respirators 5000 Series or 3M™ Cartridges 6000 Series, and 3M™ Filter Retainer 501.
7093	NIOSH approved for environments containing certain oil and non-oil based particles. Commonly used in the Abatement market, the filter is encapsulated in a hard shell to protect it from the decontaminating water spray showers.
7093C	NIOSH approved for hydrogen fluoride and certain oil and non-oil based particles. 3M recommended for relief against nuisance levels* of organic vapor/acid gases. Commonly used in the Abatement market, the filter is encapsulated in a hard shell to help protect it from the decontaminating water spray showers.
501	Filter Retainer used to hold 3M™ Particulate Filters 5N11 and 5P71/07194 (AAD) in place on top of 3M™ Respirators 5000 Series and 3M™ Cartridges 6000 Series.
502	Filter Retainer used to attach 3M™ Particulate Filters 2000 Series, 2200 Series and 7093 to 3M™ Respirators 5000 Series and 3M™ Cartridges 6000 Series.
603	Filter Adapter use to connect 5000 Series Particulate Filters only to the respirator. Also need a 3M™ Filter Retainer 501.



3M™ Half Facepiece Reusable
Respirator 6000 Series
6100, 6200, 6300

Classification

P100



N95



P95



P100




P100/HF



For use
with 5N11
and 5P71



For use with 2000
Series, 2200 Series and
7093/7093C filters



*3M recommended for relief against nuisance levels of acid gases and/or organic vapors. Nuisance level refers to concentrations less than the OSHA PEL or applicable governmental occupational exposure limits, whichever is lower.